

**Crazy Cart Shift
Front Wheel-Motor
Replacement Procedures**



(1) Place the unit on its side and using a 13mm spanner loosen up the lock nut from the axle of the front wheel.



(2) Using a 3mm Allen key remove the three hex screws from the side of the motor cover




(3) Pull the wire coming from the motor to disconnect and remove it from the housing and pull the wheel off from the fork.



(4) Remove the hardware from the axle.



(5) This double washer clip needs to be discarded, NOTE: some replacement wheels might already have the new hardware and the clip may not be on them.

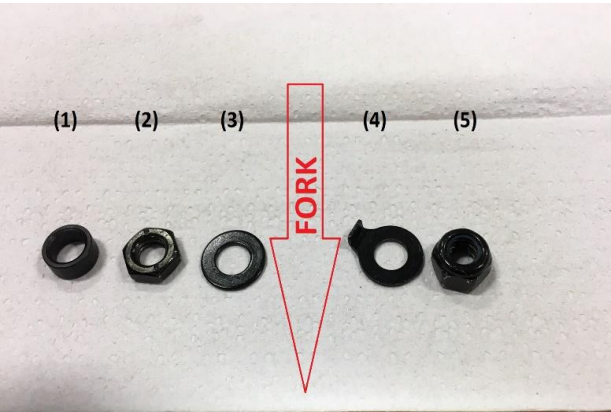

(6) Sequence on how to install new hardware, (1) spacer, (2) thin lock nut, (3) washer, FORK, (4) secure washer, (5) lock nut, NOTE: spacer needs to be inserted all the way onto the axle and have no play once the thin lock nut has been hand tightened.

Reverse the procedures

Attention: Charge battery 12 hours before using